# Non-Continuous Measurement Mode

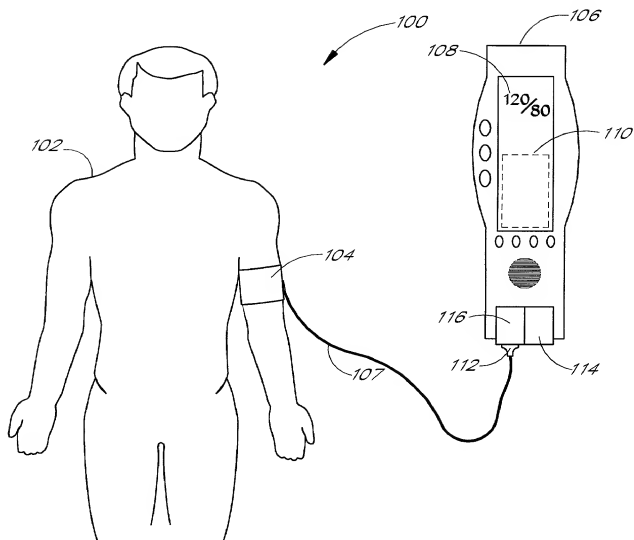

FIG. 1

Continuous Measurement Mode
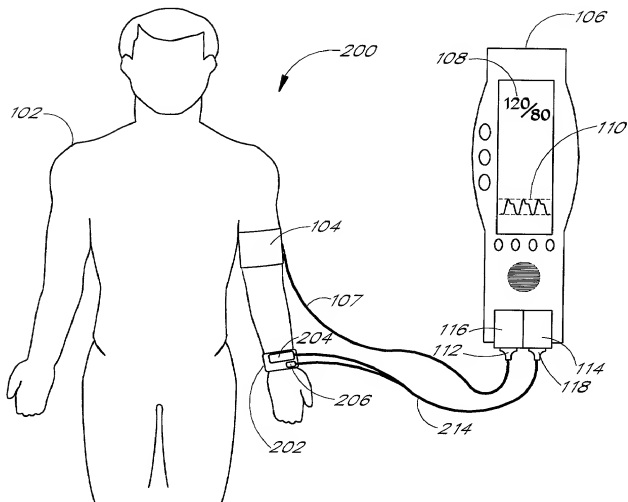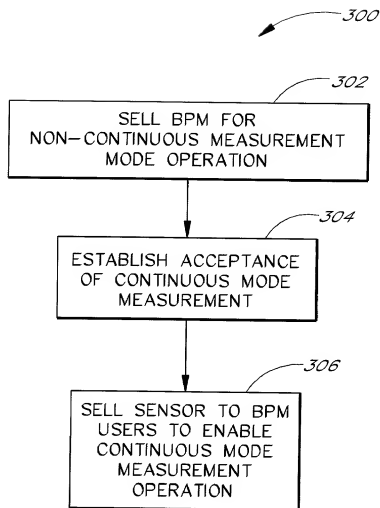


FIG. 2

_300_
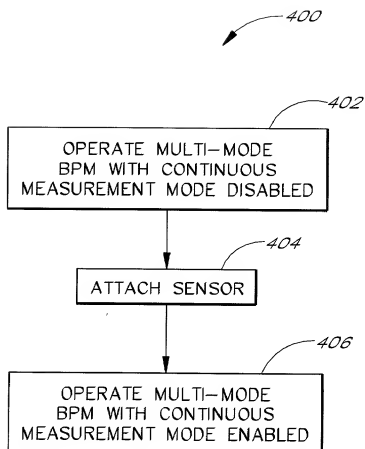
_302_

SELL BPM FOR
NON—CONTINUOUS MEASUREMENT
MODE OPERATION

_304_

ESTABLISH ACCEPTANCE
OF CONTINUOUS MODE
MEASUREMENT

_306_

SELL SENSOR TO BPM
USERS TO ENABLE
CONTINUOUS MODE
MEASUREMENT
OPERATION

FIG. 3

_400_

_402_

OPERATE MULTI—MODE
BPM WITH CONTINUOUS
MEASUREMENT MODE DISABLED

_404_

ATTACH SENSOR

_406_

OPERATE MULTI—MODE
BPM WITH CONTINUOUS
MEASUREMENT MODE ENABLED

_FIG. 4_